



2022-2026 Hyundai Santa Cruz ditch light kit installation guide
Professional installation recommended

Included in the kit:

- 1 driver side ditch light bracket
- 1 passenger side ditch light bracket
- 4 M8x25 bolts
- 2 M8x16 stainless bolts
- 2 M8 stainless nuts
- 4 M8 stainless washers
- 2 LED pod lights
- 1 universal wiring harness w/relay and power switch.
- Assortment of zip ties

Installation time: 1-2 hours

Skill level: Moderate

Tools required:

Metric socket set, flush cut zip tie cutters, 7/8 "christmas tree" bit.

Step 1. Remove 2 bolts holding driver's side hood hinge to hood.



Step 2. Place washers between ditch light bracket and hood hinge.



Step 3. Using paint shadow as a reference, align hood and tighten bolts.




Step 4. Using provided M8x16 bolt and nut, mount light to bracket. (Do not use bolts included with the lights, they are too long and can contact the hood.)




Step 5. Repeat installation process for passenger side. Secure wiring with zip ties.

Step 6. Remove fuse from wiring harness.

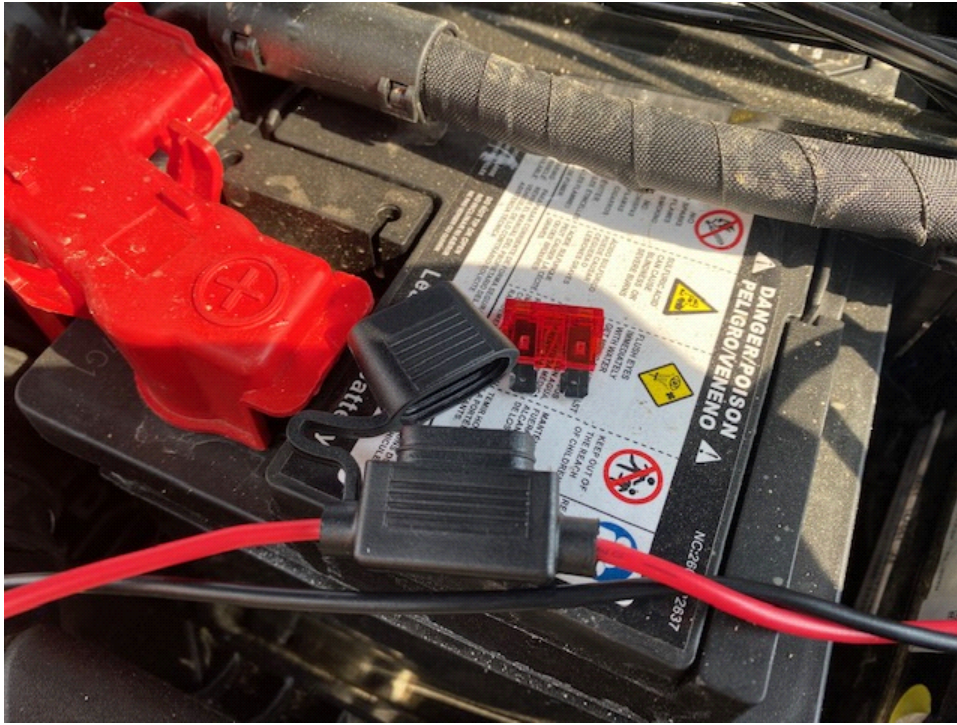

Step 7. Route wiring through positive battery post cover.

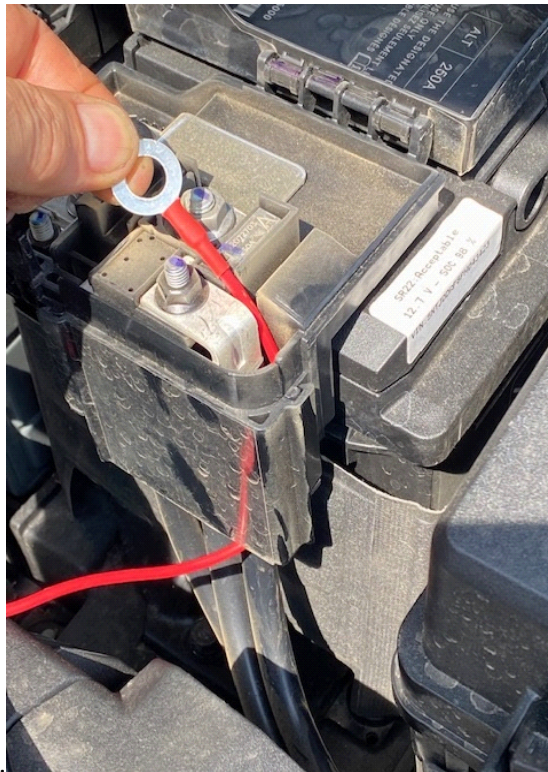

Step 8. Connect main power cable to positive battery post.



Step 9. Connect ground cable to chassis in a suitable location.

Step 10. Route wiring harness into passenger compartment and choose a location for the power switch. (We mounted ours in the center console.)

Step 11. Drill appropriately size hole for switch to mount (7/8") DO NOT drill hole larger than 7/8"

Step 12. Connect wiring to switch and pop switch into place.

Step 13. Install fuse in fuse holder.

Step 14. Bundle and secure all wiring using zip ties provided.

Step 15. Find some trails!



For tech support, please call 1-844- HRG LIFT (474-5438) from 8-4:30 PM EST Mon-Thu 8-3:30 PM Fri or email us 24/7 at support@hrgoftoad.com.

This product is intended for off-road use only!!

