




2021-2022 Ford Bronco Sport Big Bend/Outer banks Skid Plate installation guide
Professional installation recommended


Included in the kit:

- 1 skid plate set (2 pieces)
- 2 M10x50 bolts
- 2 M10x70 bolts
- 2 M10 nuts
- 4 M8x40 bolts
- 4 0.5" M10 spacers
- 4 0.5" M8 spacers

Step 1. Remove Torx screws and plastic clips holding OEM cardboard skid plate, discard cardboard skid plate. Save torx screws.

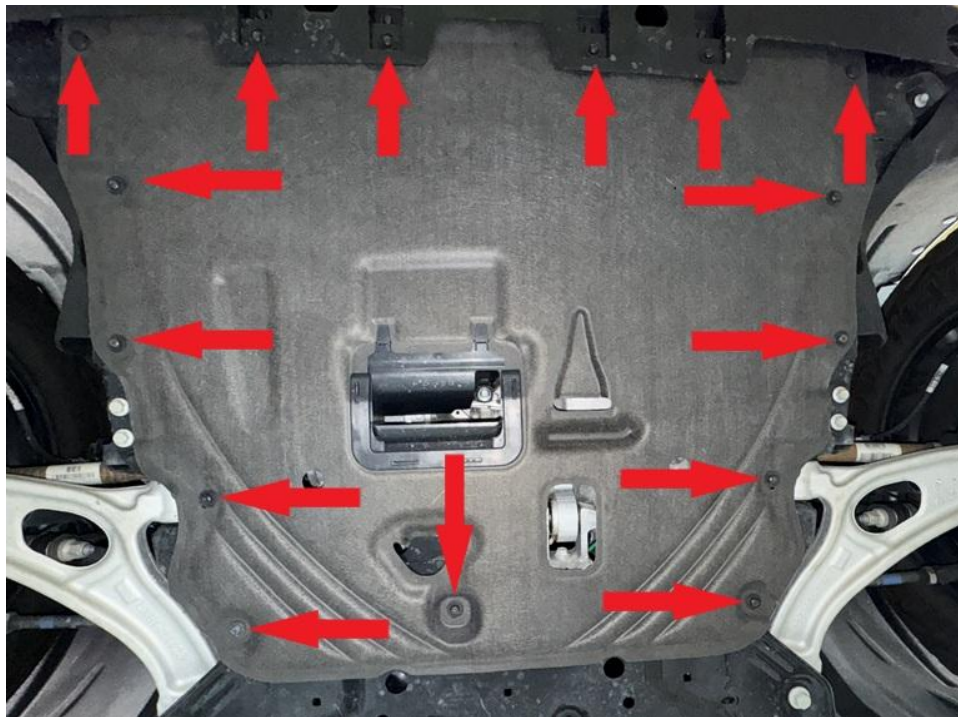

Step 2. locate holes in subframe that match the holes in the skid plate.

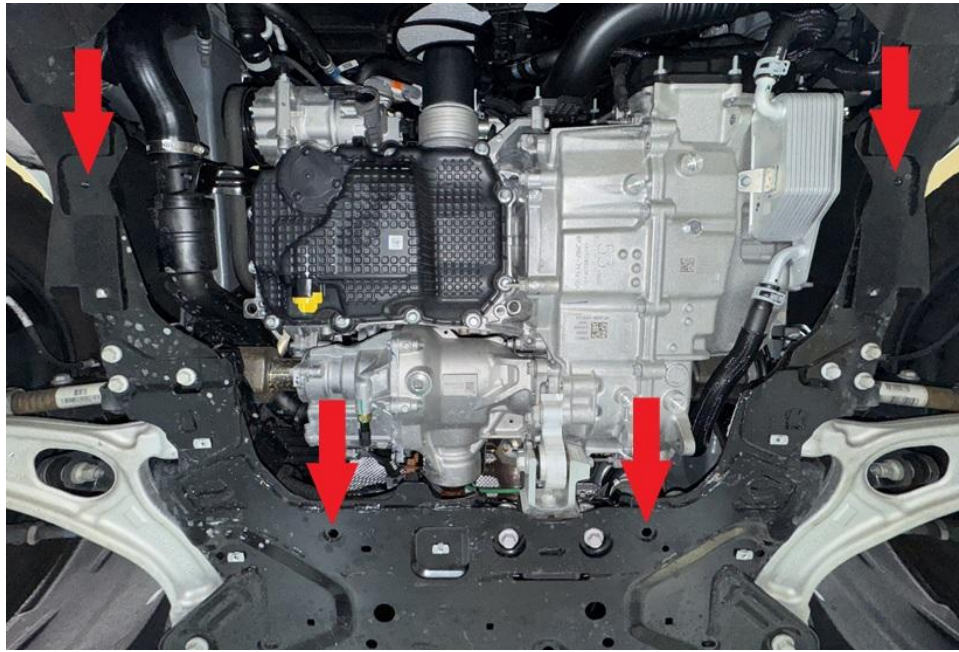

Step 3. Locate the “hexagonal” shaped holes in the subframe and drill out to 9/16” with a stepped drill bit.

Insert M10 Rivnuts and install using a Rivnut tool.

Locate lower bumper brace

Step 4. Place 2 0.5 inch M8 spacers between skid plate and subframe, install 2 M8x40 bolts in rear-most holes.

Step 5 Line up front section of skid plate under bumper so that the 2 holes in the back of the front section line up with the 2 holes in the front of the back section. Front section will sit underneath the back section. (Bolts will pass through both sections of the skid plate)

Step 6. Place 2 more 0.5 inch M8 spacers between skid plate and subframe, install 2 M8x40 bolts in second set of holes.

Step 7. Locate 2 holes in subframe that pass all the way through. These holes are not threaded.

Step 8. Place 2 0.5 M10 spacers between skid plate and subframe, install 2 M10x70 bolts in front-most holes. Secure bolts with 2 M10 nuts, accessed through fender.

Step 9. Loosen bolts and adjust skid plate if necessary.

Step 10. Tighten all bolts.

Step 11. Reinstall felt fender liner screws.



For tech support, please call 1-844- HRG LIFT (474-5438) Mon-Thu from 8-4:30 PM Fri 8-3:30 PM EST or email us 24/7 at support@hrgoffroad.com.

This product is intended for off-road use only!!

Copyright HRG Offroad. 2025